



CLEANING INSTRUCTIONS

WARNING!

Disconnect the couch from the mains power supply prior to carrying out any cleaning or decontaminating.

DO NOT SATURATE PRODUCT

IF PRODUCT GETS SATURATED DURING CLEANING, THIS COULD ACCELERATE CORROSION, REDUCING PRODUCTS LENGTH OF SERVICE.

Frequency of routine couch cleaning will depend on exact application.

1. Ensure the couch is in a suitable area for cleaning.
2. The couch must be OFF of the wheels.
3. Disconnect from mains power supply if electric model.
4. Control handsets can be wiped over using an alcohol wipe.
5. Prepare a solution of warm water and a neutral detergent.
6. DO NOT SATURATE PRODUCT – This should be a wipe down – not a soaking!
7. Start by cleaning the top surface of the couch, working down onto the frames below, ensuring to not accidentally activate any of the release levers, or user interface parts.
8. Ensure the couch is dry before re-use.
9. Safely discard of cleaning materials.
10. Wash hands thoroughly.

If DECONTAMINATING the couch then repeat steps above using a dilute Hypochlorite & warm water mixture (mixed at 10,000ppm) instead of warm water and soap.